



COMMERCIAL ELECTRIC - (4 UNITS) WITH HORIZONTAL STORAGE TANK

WARNING: THIS DRAWING SHOWS SUGGESTED PIPING CONFIGURATION AND OTHER DEVICES; CHECK WITH LOCAL CODES AND ORDINANCES FOR ADDITIONAL REQUIREMENTS.

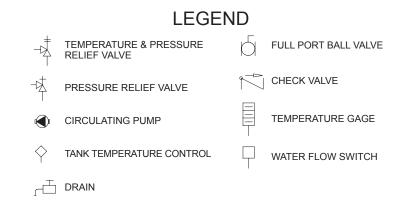

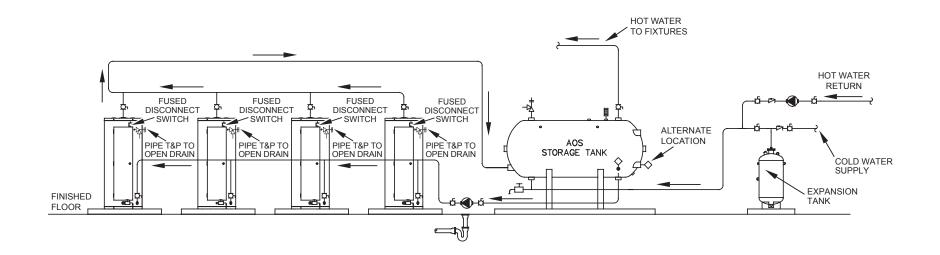

NOTES:

1. Preferred piping diagram.

- 2. The temperature and pressure relief valve setting shall not exceed pressure rating of any component in the system.
- 3. Service valves are shown for servicing unit. However, local codes shall govern their usage.
- 4. The Tank Temperature Control should be wired to and control the pump between the water heater(s) and the storage tank(s).
- 5. The water heater's operating thermostat should be set 5 degrees F higher than the Tank Temperature Control.

For Technical Information and Automated Fax Service, call 800-527-1953 or visit www.hotwater.com. A. O. Smith Corporation reserves the right to make product changes or improvements without prior notice.